



WARNING

The following precautions must be taken before disconnecting and removing a chain from a system prior to replacement.

- Always shut off power switch to isolate equipment before installing, removing, lubricating, or servicing a chain system.
- Connecting and disconnecting chain - always use safety glasses to protect your eyes.
- Always loosen tensioning devices.
- Support the chain to prevent uncontrolled movement of chain and parts.
- Do not attempt to connect or disconnect chain unless you know the chain construction.
- Use of correct extractor tools is recommended. Tools must be in good condition and properly used.
- Consult manufacturer or authorized distributor for complete assembly or disassembly procedures.
- If chain is to be used on high speed or heavily loaded applications, it is recommended that the use of crank link joints be avoided.
- Guards must be provided on all chain and sprocket installations in the USA in accordance with the provisions of ANSI/ASME B15.1-2000 "safety standards for mechanical power transmission apparatus" and ANSI/ASME B20.1-2003 "safety standards for conveyor and related equipment" or other applicable safety standards. When revisions of these standards are published, the updated editions shall apply.
- **Never reuse individual components.**
- **Never reuse a damaged chain or chain part.**
- Roller chain lubrication - this chain requires lubrication. See www.renold.com for guidance on lubrication.

Note: Failure to follow these practices could result in damage, serious injury, or death.

Chain Installation and Maintenance

Introduction

Renold has more than 100 years of experience in the operation and maintenance of roller chain. Involvement with designers, manufacturers, and users of all types of equipment has enabled Renold Jeffrey to develop this definitive guide, designed to pass on the preferred methods of correct handling, adjustment, installation, and maintenance of roller chain drives resulting in maximum chain life.

The notes given below are general recommendations and should be followed in the selection and installation of a chain drive in order that satisfactory performance and drive life may be ensured. Should you require any further information, please contact our technical sales staff.

Equipment Needed

Break chain with a Renold Chain Extractor:

- 10101 for chains from 0.375" to 0.625" pitch
- 10102 for chains from 0.75" to 1.25" pitch

For joining any chain up to 2.5" pitch, a drift punch will be required.

Construction of medium or heavy chain drives requires millwrighting equipment such as lifting tackle, slings, wedges, packing, etc.

OTHER USEFUL EQUIPMENT

Quantity of inner and outer links
 Straight edges and/or strong, fine line
 Spirit level
 Plumb line
 Selection of hammers, files, key blanks, etc.

Preparation

Check equipment to ensure that general transmission requirements are correct (e.g. flexible couplings, flywheel, means of drive adjustment).

Check condition and rigidity of the shafts and bearings, particularly if there has been considerable previous service with an alternative method of transmission. Replace or correct if necessary.

Driver and driven shafts should be checked to ensure they are level and parallel to each other. This also applies to the idler shaft, if present.

Use a spirit level and adjustable comparator bar or micrometer between shafts at extreme points on each side of the drive. Correct any parallelism errors and mark a permanent data line for the adjustable shaft.


Place sprockets or respective shafts in approximate alignment and fit the keys in accordance with correct engineering practice. Do not secure keys at this stage.

Care must be taken with sprockets of split design to ensure perfect adjoining of the faces of each half. Proceed with the key fitting after the halves are finally bolted together, otherwise the key can prevent correct assembly and subsequently result in malgearing.

Verify that key heads will not project beyond the width of any chain cases.

Checking Sprocket Alignment


Accurate alignment of shafts and sprocket tooth faces provides a uniform distribution of load across the entire chain width and contributes substantially to maximum drive life.

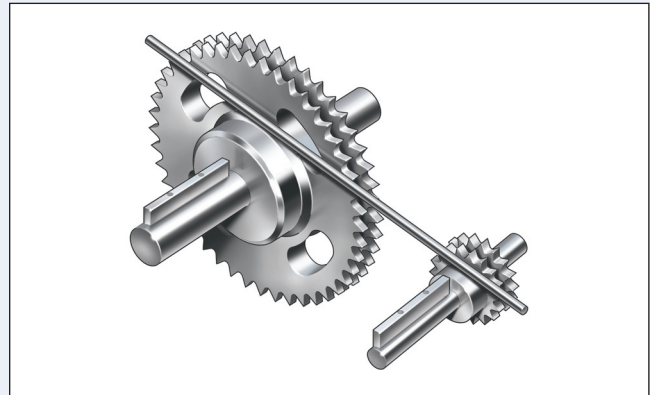

Use a straightedge across the machined faces of the sprockets in several different positions, if possible, as a check against wobble. A nylon or similar line is a good substitute for a straightedge, particularly on longer center distances.

Should endwise "float" of shafts be present, make due allowance so that sprocket alignment is correct at the mid position of "float."

When alignment is correct within closest practical limits, drive the keys home and take a final check on sprocket alignment.

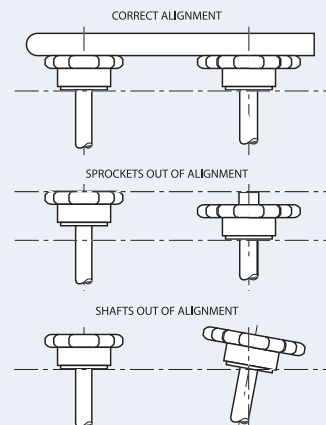

Important Note

Sprockets should always be designed to be as close to the supporting bearings as possible.

Installation of Chain

Renold Chain should not be assembled on the sprockets until attention has been paid to:

1. Cleanliness of the sprocket teeth, particularly if debris of an abrasive nature (cement dust, weld spatter, etc.), has been prevalent while work was in progress.
2. Temporary positioning of the lower section of a chain case, if present. In restricted spaces, maneuvering of large sections is often simplified by using the spaces between shafts that will later be occupied by the chain.


Ensure the chain is clean and free of debris and place around the sprockets, observing instructions where matched strands are involved. In chain with two or more strands, joining is most easily accomplished at the mid-span of the drive, drawing the chain ends together with a chain clamp or rope tackle block. Ensure that the strength of the drawing tackle is sufficient to hold the chain. Chain weights are shown in the Renold Jeffrey catalog. When inserting the joining link of multi-strand chain, ensure the intermediate plates are assembled. Do not detach the drawing tackle until the link is completely assembled. When only partially inserted through the inner link, the weight of the chain on release can splay or distort unsupported bearing pins.

Adjust the chain using the data mark mentioned in the preparation section to retain shaft parallelism.

For a chain of average center distance (30-50 x chain pitch) correct adjustment is when the midpoint of the longest span can be fully moved by hand in accordance with dimension 'A' shown in diagram one.

Diagram One

Over-tensioning should be avoided in all cases.

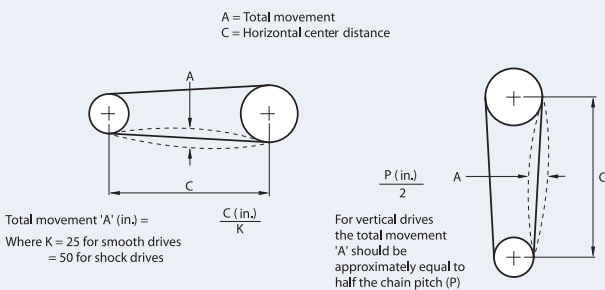

Chain cases

- Position the chain case bottom sections with the shafts concentric in their cavities.
- Manufacture suitable mountings and brackets to ensure rigidity.
- Assemble the oil supply and return pipe system and the drive to the oil pump.
- Assemble top section(s) of chain case.
- Fill the oil sump and check delivery to the chain.

Chain Adjustment


To maximize chain life, some form of chain length adjustment must be provided, preferably by moving one of the shafts. (See diagram three on page 206.) If shaft movement is not possible, an adjustable idler sprocket engaging with the unloaded strand of the chain is recommended. Generally, the idler should have the same number of teeth as the driver sprocket and care should be taken to ensure speed does not exceed the maximum ratings shown.

The chain should be adjusted regularly so that with one strand tight, the slack strand can be moved a distance of 'A' at the midpoint. (See diagram one.)

To accommodate for any eccentricities of mounting, the adjustment of the chain should be tested through a complete revolution of the large sprocket.

Adjustment is achieved either by the movement of one of the shafts or by use of the idler sprocket. The amount of the adjustment provided by either method should be sufficient to take up chain wear amounting to two pitches or 2% elongation above nominal chain length, whichever is the smallest.

Diagram Two

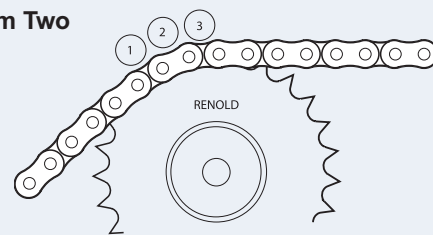


When used for adjustment, an idler sprocket should be positioned on the unloaded side of the chain, preferably nearer to the driven sprocket and gearing with the outside of the chain. It should have an initial chain lap of at least three teeth and a free length of chain not less than four pitches between it and the nearest sprocket. (See diagram two above.)

Generally, the number of teeth in any idler sprocket should not be less than the smallest sprocket and care should be taken to ensure that the speed does not exceed the maximum recommended. Where necessary, several sprockets can be used on a single drive, thereby meeting all possible needs for adjustment.

Chain Installation and Maintenance

All mountings for idler sprockets should be rigid and when manual adjustment is provided, the moving member must be securely locked in position after adjustments have been made.

Diagram Three

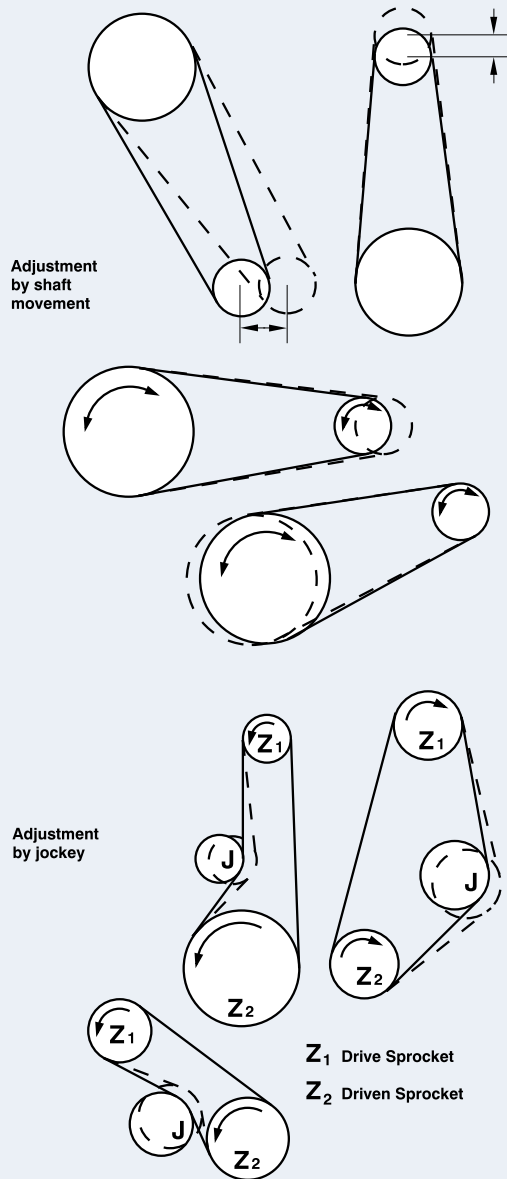

AUTOMATIC ADJUSTMENT

Automatic adjustment can also be provided, but this adjustment generally demands a special study of the conditions to enable a suitable design to be provided.

Test Run

Give the drive a short test run:

1. to regulate oil delivery to the chain;
2. to eliminate any oil weeps from the chain case and pipework;
3. to check for any unusual noise or vibration.

Maintenance Schedule

Regular chain maintenance is important to obtain maximum life. In a correctly sized and installed drive, chain can be expected to last for approximately 15,000 hours.

The following maintenance schedule is suggested.

AFTER 3 MONTHS

- Check chain adjustment and rectify if necessary.
- Change oil, oil filter, and clear the sump.

ANNUALLY

- Carry out the above checks.
- Check for wear on sideplates.
- Check for chain elongation.
- Check cleanliness of components:
 - Remove any accumulation of dirt or foreign materials.
- Check for shaft and sprocket alignment.
- Check for wear on sprockets.
- Check the condition of the lubricant.
- Check the lubrication system:
 - Feed pipes are not clogged.
 - Lubrication schedule is being followed (manual lubrication).
 - Drip rate is sufficient (drip system).
 - Oil level is correct (drip, bath and disc systems).
 - Pump is working (stream system).

Chain Protection

A new Renold Chain should always be stored in its box and/or bag until installation. Renold Chain is lubricated at the factory, but this lubrication will not stand up to outdoor conditions, particularly in a saltwater atmosphere.

Unprotected, lubricated chains will become contaminated with grit and other materials that will harm the chain and tend to clog strainers, filters, and oil lines. A roller chain is a precision-made series of bearings that will perform best if handled and stored in correct conditions.

Lubrication

Renold Chain drives should be protected against dirt and moisture and lubricated with good quality, non-detergent petroleum-based oil. A periodic change of oil is desirable as already outlined. Heavy oils and greases are generally too stiff to enter the chain working surfaces and should not be used.

Care must be taken to ensure that the lubricant reaches the bearing area of the chain. This can be done by directing the oil into the clearances between the inner and outer linkplates, preferably at the point where the chain enters the sprocket on the bottom strand.

The table below indicates the correct lubricant viscosity for various ambient temperatures.

Ambient Temperature		Lubricant SAE	Rating BS4231
°F	°C		
23 to 41	-5 to +5	20	46 to 68
41 to 104	5 to 40	30	100
104 to 122	40 to 50	40	150 to 220
122 to 140	50 to 60	50	320

For the majority of applications in the above temperature range, a multigrade SAE 20/50 oil is suitable.

USE OF GREASE

As mentioned above, the use of grease is not recommended. However, if it is essential to use grease lubrication, the following points should be noted:

- Limit chain speed to approximately 13 feet/sec. (4 meters/sec.)
- Applying normal greases to the outside surfaces of a chain only seals the bearing surfaces and will not work into them. This causes premature chain failure. Grease must be heated until fluid and the chain are immersed and allowed to soak until all air bubbles cease to rise. If this system is used, the chains need regular cleaning and regreasing at intervals, depending on the drives, power, and speed.

ABNORMAL AMBIENT TEMPERATURES

For elevated temperatures up to 482°F (250°C), dry lubricants such as colloidal graphite or MoS₂ in white spirit or poly-alkaline glycol carriers are most suitable.


Conversely, at low temperatures between -40°F and 23°F (-40°C and -5°C), special low temperature initial greases, and subsequent oil lubricants are necessary. Lubricant suppliers will give recommendations.

LUBRICATING METHODS

There are four basic methods for lubricating chain drives. The recommended methods are shown in the rating charts, which are determined by the chain speed and power transmitted.

TYPE 1: Manual Lubrication


Oil is applied periodically with a brush or oil can, preferably once every eight hours of operation. Volume and frequency should be sufficient to just keep the chain wet with oil and allow penetration of clean lubricant into the chain joints.

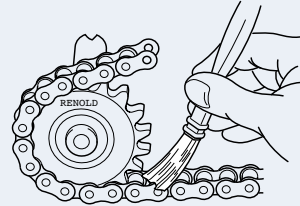

Applying lubricant by aerosol can be satisfactory under some conditions, but it is important that the aerosol lubricant is of an approved type for the application, such as that supplied by Renold Jeffrey. This type of lubricant penetrates into the pin/bushing/roller clearances, resisting both the tendency to drip or drain when the chain is stationary and centrifugal "flinging" when the chain is moving.


TYPE 2: Drip Lubrication

Oil drips are directed between the linkplate edges from a drip lubricator. Volume and frequency should be sufficient to allow penetration of lubricant into the chain joints.

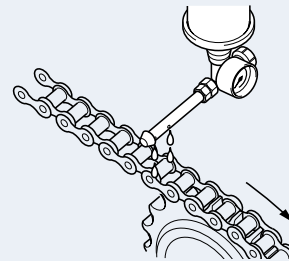

TYPE 3: Bath or Disc Lubrication

With oil bath lubrication, the lower strand of chain runs through a sump of oil in the drive housing. The oil level should cover the chain at its lowest point during operation.

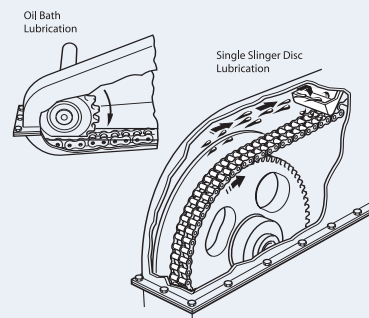


Chain Installation and Maintenance

With slinger disc lubrication, an oil bath is used but the chain operates above the oil level. A disc picks up oil from the sump and deposits it on the chain by means of deflection plates. When such discs are employed, they should be designed to have peripheral speeds between 590 and 7,350 ft./min.

TYPE 4: Stream Lubrication

A continuous supply of oil from a circulating pump or central lubricating system is directed onto the chain. It is important to ensure that the spray holes from which the oil emerges are in line with the chain edges. The spray pipe should be positioned so that the oil is delivered onto the chain just before it engages with the driver sprocket. This ensures that the lubricant is centrifuged through the chain and assists in cushioning roller impact on the sprocket teeth. Stream lubrication also provides effective cooling and impact damping at high speeds. It is, therefore, important that the method of lubrication specified is closely followed.

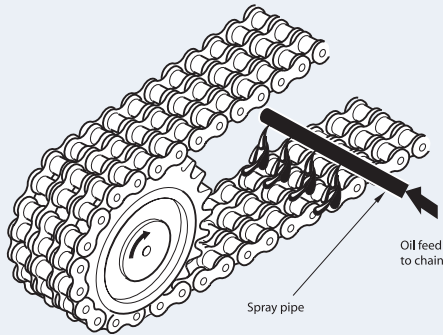

EFFECT OF TEMPERATURE

During operation an important factor to control in a drive system is the chain and chain case temperature. Depending on the severity of the drive service, continuity of use, etc., special attention to the lubrication method may be required.

Chain temperatures above 212°F (100°C) should be avoided if possible due to lubricant limitations, although chain can generally give acceptable performance up to approximately 482°F (250°C) in some circumstances. One way of improving the effectiveness of the lubrication and its cooling effect is to increase the oil volume (up to 1.2 gallons per minute or 4.5 liters per minute per chain strand) and incorporate a method of external cooling for the oil.

Measuring Chain Wear

A direct measure of chain wear is the extension in excess of the nominal length of the chain. Chain wear can, therefore, be ascertained by length measurement in line with the instructions given below.


- Lay the chain, which should terminate at both ends with an inner link (roller link), on a flat surface and, after anchoring it at one end, attach a turnbuckle and a spring balance to the other end.
- Apply a tension load by means of the turnbuckle amounting to:

For single-strand chain: $(25.4 \times P)^2 \times .173$ lbs

For double-strand chain: $(25.4 \times P)^2 \times .351$ lbs

For triple-strand chain: $(25.4 \times P)^2 \times .524$ lbs

Where P is the pitch in inches.



In the case of extended pitch chains (e.g. chains having the same breaking load and twice the pitch) apply a measuring load as for the equivalent short pitch chains.

As an alternative to the use of a turnbuckle and spring balance, the chain may be hung vertically and the equivalent weight attached to the lower end.

- Measure length 'M' (see diagram) in inches from which the percentage extension can be obtained from the following formula:

$$\text{Percent Elongation} = \frac{M - (X \times P)}{X \times P} \times 100$$

Where X = number of pitches measured

P = pitch in inches

- As a general rule, the useful life of the chain is terminated and the chain should be replaced when the percentage extension reaches 2 percent (1 percent in the case of extended pitch chains). For drives with no provision for adjustment, the rejection limit is lower, dependent upon the speed and layout. A usual figure is between 0.7 and 1.0 percent extension.


CHAIN WEAR GUIDE

A simple to use chain wear guide is available from Renold Jeffrey for most popular sizes of chain pitch. Please contact your sales office for details.

Riveting Chain Endless

ROLLER CHAINS UP TO 2.5" PITCH (63.5mm)

- Insert the bearing pins of the outer link through the inner link of the chain to be joined. If multi-strand chain, assemble intermediate plates at the same time.
- Provide support for the outer link while assembling the separate outer plate. This has a force fit and is driven onto the bearing pins using a hollow punch alternatively on each pin. Drive up to the shoulder on the shouldered bearing pins. Where there is no shoulder the plate is driven to the point of similar clearance between outer and inner links as with the adjacent chain.

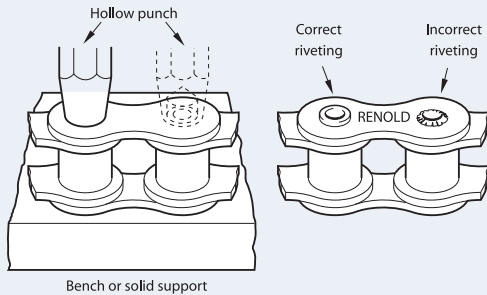

- Still supporting the outer link, rivet the bearing pin ends, taking care to finish with a neat uniform spread having a similar appearance to the machine-riveted pins in the adjacent chain. The force required to spread the pin end will vary with the pitch of the chain; excessive riveting force should always be avoided. Except where final chain joining in position is necessary, the work should be carried out on a bench.
- Check that the newly fitted link articulates freely in the adjacent inner link.

Chain Length Alterations

All drives should be designed, whenever possible, with sufficient overall adjustment to ensure the use of an even number of pitches throughout the useful life of the chain. Offset links should never be used on highly loaded or high-speed chain drives.


In less arduous conditions where the use of an offset link is unavoidable, the diagrams below show how length alteration can be accomplished.

A chain with an even number of links requires the incorporation of an offset link to effect an alteration of one pitch.

Chain with an odd number of links incorporates an offset link, which must be removed to effect an alteration of one pitch.

By removing the parts shown in dark shading and substituting those in light shading, a chain can be shortened or lengthened by one pitch.

No link that relies on a press fit for assembly should be reused after removal. A new link should always be employed.

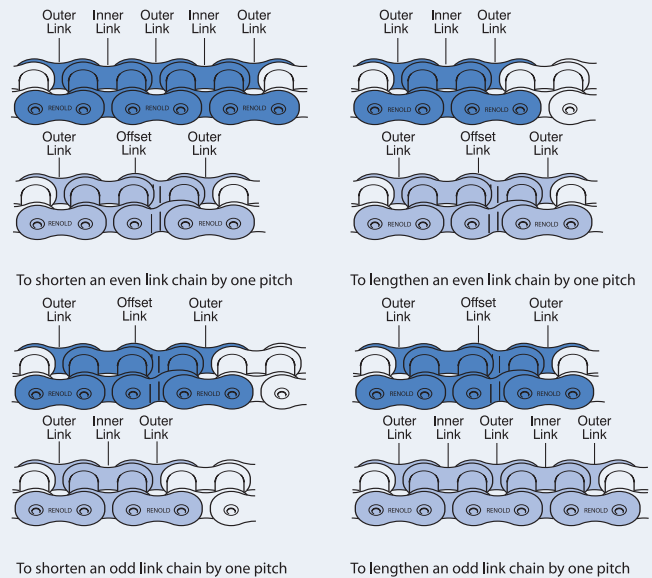

Chain Installation and Maintenance

Pairing and Matching Chains

Any application in which two or more strands of roller chain are required to operate side by side in a common drive or conveying arrangement may involve the need for either pairing or matching. Such applications generally fall into one of the following categories:

Length Matching for Conveying and Similar Applications

Wherever length matching of roller chain is necessary it is dealt with as follows:

- The chains are accurately measured in handling lengths between 10 feet and 25 feet as appropriate and then selected to provide a two (or more) strand drives that have overall length uniformity within close limits. Though such length uniformity will not necessarily apply to any intermediate sections along the chains, the actual length of all intermediate sections, both along and across the drive, will not vary more than our normal manufacturing limits. However, attachment chains are usually manufactured to specific orders, which are generally completed in one production run so that it is reasonable to assume that length differences of intermediate sections will be small.
- Chains are supplied in sets that are uniform in overall length within reasonably fine limits and will be within our normal manufacturing limits. It should be noted that chain sets supplied against different orders at different times may not have exactly the same lengths to those supplied originally, but will vary by no more than our normal tolerance of 0.0%, +0.15%.

Pitch Matching Roller Chains

Pitch-matched chains are built up from shorter subsections (usually 1- to 2-foot lengths) which are first measured and then graded for length. All subsections in each grade are of closely similar length and those forming any one group across the set of chains are selected from the same length grade.

The requisite number of groups are then connected to form a pitch-matched set of chains, or alternatively, if too long for convenient handling, a set of handling sections for the customer to assemble as a final set of pitch-matched chain. Suitable tags are fixed to the chains to ensure they are connected together in the correct sequence.

Identification of Handling Lengths

	Handling Length 1	Handling Length 2	Handling Length 3
A Strand	A-A1	A1-A2	A2-A3
B Strand	B-B1	B1-B2	B2-B3
C Strand	C-C1	C1-C2	C2-C3

Long chains are made up in sections; each section is numbered on end links. Sections should be so joined up that end links with similar numbers are connected. When chains are to run in sets of two or more strands, each strand is stamped on the end links of each section with a letter, in addition to being numbered. Correct consecutive sections for each strand must be identified from the end links and joined up as indicated.

By these means, the actual length of any intermediate portion of one strand (as measured from any one pitch point to any other) will correspond closely with that of the transversely equivalent portion on the other strands, generally within 0.002 in., depending on the chain pitch size.

Pitch Matching Attachments Fitted to Chains

With the sole exception of extended bearing pins, it is not possible to match the pitch of holes in attachments themselves to within very fine limits, due to the additional tolerances to be contended with (bending, holing, etc.).

Color Coding


For customers who wish to match their chains, Renold Jeffrey color codes short lengths of chain within specified tolerance bands. These will normally be red, yellow, or green paint marks to indicate lower, mid, and upper thirds of the tolerance band. For even finer tolerance bands, additional colors can be used. Normally a maximum of five colors is more than adequate.

Color	Tolerance
RED	0.05%
YELLOW	0.10%
GREEN	0.15%
BLUE	For finer tolerances
WHITE	

Repair and Replacement

SPROCKETS

Examination of the tooth faces indicates the amount of wear that has occurred. Under normal circumstances, this will be evident as a polished worn strip about the pitch circle diameter on each of the sprocket teeth as shown below.

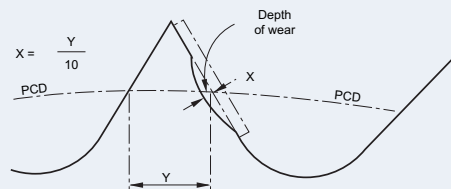

If the depth of this wear "X" has reached an amount equal to 10 percent of the "Y" dimension, then steps should be taken to replace the sprocket. Running new chain on sprockets having this amount of tooth wear will cause rapid chain wear.

It should be noted that in normal operating conditions with correct lubrication, the amount of wear "X" will not occur until several chains have been used.

CHAIN

Chain repair should not, as a rule, be necessary. A correctly selected and maintained chain should gradually wear out over a period of time, (approximately 15,000 hours) but it should not fail. A length extension check as detailed on page 208 will give an indication of the service life remaining.

If a transmission chain sustains damage due to an overload, jam-up, or by riding over sprocket teeth; it should be carefully removed from the drive and given a thorough visual examination. Remove the lubricating grease and oil to make the job easier.

Depending on the damage, it may be practicable to effect temporary repairs using replacement links. It is not, however, a guarantee that the chain has not been overstressed and so made vulnerable to a future failure. The best policy therefore is to remove the source of trouble and fit a new chain.

If a chain has failed two or more times, it is certain the chain will fail again in time. It is advisable to replace the chain immediately. Further repair and use is not recommended.

The entire chain should be replaced because of the following reasons:

- The cost of downtime to the system or machine can often outweigh the cost of replacing the chain.
- A new or even used portion of chain or links assembled into the failed chain will cause whipping and load pulsation. This will likely produce rapid chain failure and will accelerate wear of both the chain and its sprockets.

Assembling Connecting Links

When assembling a connecting link with a slip-fit outer plate, the plate must be pushed down on the pins to permit insertion of the fastener. Always ensure that the closed end of the spring clip is in the direction of rotation.

On a press-fit connecting link, it is necessary to drive the outer plate down far enough on the pins to allow insertion of the two split pins, but not so far as to create a tight joint.

By doing the above, three important things are accomplished.

- The desired clearances between the link plates across the chain width are maintained. Any outer link plate driven too far down the pins squeezes the joint, so that no lubrication can get to the bearing surfaces. Such squeezing of a joint prevents a chain articulating freely around the sprockets.
- Correct assembly of a connecting link into a chain will ensure a smooth gearing action with a minimum of whipping.
- With the split pins or spring clip snugly positioned against the side plate and the closed end of a spring clip fitted in the right direction, there will be less of a tendency for them to work loose and fall off.

Safety Warnings**CONNECTING LINKS**

Slip-fit connecting links should not be used where high speed or arduous conditions are encountered. In these or equivalent circumstances where safety is essential, a press-fit connecting link must be used.

GOOD DESIGN PRACTICES

For high speed drives or drives operating in arduous conditions, a properly riveted outer link should always be used for optimum security, in preference to any other form of chain joint.

The use of other connecting and offset links should always be restricted to light duty, non-critical applications, in drives where an odd number of pitches is absolutely unavoidable.

Wherever possible, drives should have sufficient overall adjustment to ensure the use of an even number of pitches throughout the useful life of the chain.

Health and Safety Warning

The following precautions must be taken before disconnecting and removing a chain from a drive prior to replacement, repair or length alteration.

- Always shut off power switch to isolate equipment before installing, removing, lubricating, or servicing a chain system.
- Connecting and disconnecting chain - always use safety glasses to protect your eyes.
- Always loosen tensioning devices.
- Support the chain to prevent uncontrolled movement of chain and parts.
- Do not attempt to connect or disconnect chain unless you know the chain construction.
- Use of correct extractor tools is recommended. Tools must be in good condition and properly used.
- Consult manufacturer or authorized distributor for complete assembly or disassembly procedures.
- If chain is to be used on high speed or heavily loaded applications, it is recommended that the use of crank link joints be avoided.
- Guards must be provided on all chain and sprocket installations in the USA in accordance with the provisions of ANSI/ASME B15.1-2000 "safety standards for mechanical power transmission apparatus" and ANSI/ASME B20.1-2003 "safety standards for conveyor and related equipment" or other applicable safety standards. When revisions of these standards are published, the updated editions shall apply.
- **Never reuse individual components.**
- **Never reuse a damaged chain or chain part.**
- Roller chain lubrication - this chain requires lubrication. See www.renold.com for guidance on lubrication.




Chain Installation and Maintenance




Troubleshooting Guide

Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Rusted chain	<ul style="list-style-type: none"> Exposed to moisture Water in lubricant Inadequate lubrication 	<ul style="list-style-type: none"> Replace chain with Renold Jeffrey Nickel-Plated, Hydro-Service[®], or Stainless Steel products. Change lubricant. Protect lubrication system from water. Replace chain if necessary. Provide or re-establish proper lubrication.
Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Excessive noise	<ul style="list-style-type: none"> Obstruction Loose casing or shaft mounts Excessive chain slack Excessive chain wear Excessive sprocket wear Sprocket misalignment Inadequate lubrication Chain pitch is too large Too few sprocket teeth 	<ul style="list-style-type: none"> Inspect and remove obstruction. Replace chain if necessary. Tighten fasteners. Re-tension chain. Replace chain. Inspect chain for damage and replace sprockets. Inspect chain and sprockets for damage and re-align sprockets and shafts. Inspect chain. Clean and establish correct lubrication. Redesign the drive using a smaller chain pitch (multiple strands), if possible. Check to see if larger sprockets can be used. If not, redesign drive using a smaller chain pitch (multiple strands), if possible.
Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Wear on roller link plates and on one side of the sprocket tooth surface	<ul style="list-style-type: none"> Sprocket misalignment 	<ul style="list-style-type: none"> Inspect chain and sprockets for damage and re-align sprockets and shafts.
Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Chain clings to sprocket teeth	<ul style="list-style-type: none"> Excessive sprocket wear Sprocket misalignment 	<ul style="list-style-type: none"> Inspect chain for damage and replace sprockets. Inspect chain and sprockets for damage and re-align sprockets and shafts.
Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Chain climbs the sprocket teeth	<ul style="list-style-type: none"> Excessive chain slack Excessive chain wear Excessive sprocket wear Extreme overload 	<ul style="list-style-type: none"> Re-tension chain. Replace chain. Inspect chain for damage and replace sprockets. Inspect the drive. Replace chain and eliminate the cause of overload.

Troubleshooting Guide

Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Missing or broken cotters	<ul style="list-style-type: none"> Cotters installed improperly Excessive Vibration Excessive chain speed 	<ul style="list-style-type: none"> Install new cotters. Reduce vibration. Use larger sprockets if possible. Reduce speed if possible or redesign for smaller-pitch chain (multiple strands).

Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Broken link plates		
 Ultimate Strength Failure	<ul style="list-style-type: none"> Extreme overload 	<ul style="list-style-type: none"> Replace chain and inspect all drive components for damage. Replace damaged components and eliminate the cause of overload.
 Fatigue Failure	<ul style="list-style-type: none"> Loading is greater than the chain's dynamic capacity 	<ul style="list-style-type: none"> Inspect the drive to determine the cause of high load and eliminate if possible. Redesign the drive using a higher-capacity chain if the cause of high load cannot be eliminated.
 Stress Corrosion Cracking	<ul style="list-style-type: none"> Exposure to severe corrosion in combination with high interference fits Hydrogen embrittlement from improper plating of chain. 	<ul style="list-style-type: none"> Protect the chain from corrosion or use stainless steel products. Never plate chains. Order plated chain from the manufacturer.

Chain Condition or Symptom	Possible Cause of Problem	Suggested Remedy
Pin failures		
 Broken Pins	<ul style="list-style-type: none"> Extreme overload 	<ul style="list-style-type: none"> Replace chain and inspect all drive components for damage. Replace damaged components and eliminate the cause of overload.
 Pin Galling	<ul style="list-style-type: none"> Inadequate lubrication Overload 	<ul style="list-style-type: none"> Replace chain and lubricate properly. Replace chain and inspect all drive components for damage. Replace damaged components and eliminate the cause of overload.
 Turned Pins	<ul style="list-style-type: none"> Overload 	<ul style="list-style-type: none"> Replace chain and inspect all drive components for damage. Replace damaged components and eliminate the cause of overload.